

### model builder











# FPO XXX / XXX -

# **BCDFMNS**





**PROWIRE®** 



#### **POWER SUPPLIES**

UL Series 12	20 or 2	230 VAC
FP075	75W	6A/12VDC or 3A/24VDC
FP0150	150W	12A/12VDC or 6A/24VDC
FP0250	250W	20A/12VDC or 10A/24VDC
single voltage FPO dual voltage FPO		
dual voltage FPO	150/250	es 85-265 VAC
dual voltage FPO	150/250	es 85-265 VAC 2A/12VDC or 2A/24VDC

FPG200 200W 8A/24VDC

### **ACCESSORY OPTIONS**

	B100	Secondary voltage, 5-18VDC @ 4A
	C4	Lock control distribution, 4 out
	C8	Lock control distribution, 8 out
	D8	Auxiliary distribution, 8 out
	F8	FAI distribution, 8 out
	M8	Managed lock control, 8 out (requires NL)
	NL4	Four port network module
	NLX	Eight port network module w/ RS485
	SD4	Managed auxilliary, 4 out (requires NL)
	SD16	Managed auxilliary, 16 out (requires NL)
٠		

### **ENCLOSURE**

E5	8.5H" x 11W" x 3D"
E1	14H" x 12W" x 4.5D"
E2	20H" x 16W" x 4.5D"
E4	24H" x 20W" x 6.5D"
E6	30H" x 23W" x 6.5D"
E8	36H" x 30W" x 6.5D"
E12	48H" x 36W" x 8.0D

### **BACKPLATE**



**PW SUFFIX DESCRIBES** 



\*refer to product datasheet for detailed panel options

# Mercury. Software House Honeywell Obrivo CALLAGHER













LifeSafety Power FlexPower part numbers are modular and describe the components within each system.

The part number consists of two sections separated by a hyphen. The first three characters call out the power supply product BRAND, FPO for FlexPower Offline, FPG for FlexPower Global. The number portion of the part number before the hyphen represents the power supply model within the BRAND family. For example, FPO75 denotes an FPO75 in the system. Multiple power supplies can be installed in one enclosure which is denoted in the model number by a "/" forward slash. Power supply sizes are always listed from smallest to largest. For example, a FPO250 and FPO75 would be listed in the model number as "FPO75/250".

The portion of the model number after the "-" hyphen denotes any accessory boards included in the system and details regarding enclosure assembly. After the hyphen "-" each accessory board is listed with the quantity before it. A quantity of one has no prefix. For example, a single D8 board would be in the model number simply as "D8". If the system has two D8 boards, it will be listed in the model number as "2D8". Accessory boards are always listed sequentially in the part number in alphabetical order, i.e B100C8D8F8M8NL4.

After the accessory modules, the enclosure type is listed. E4 for an E4 24 x 20" enclosure. The letter or letter/ number combination after the enclosure type denotes the style of optional access control backplate that could be put into the enclosure.

At the end of a FPO series model number a "/E" denotes a system with factory set 230VAC input. Example FP0150-C82D8PE4/E. If /E is not present, then the system is 120VAC input by default, but may be set to 230VAC by cutting a jumper.

FPG power supplies utilize a universal AC input and operate from 100-240VAC at 50 or 60Hz without the need to cut a jumper or indicate the AC input in the model number.



### model builder



#### FPO XXX / XXX -BCDFMNS

## **EXX**

# XX

# P16-A

PROWIRE®



### **POWER SUPPLIES**

UL Series 12	20 or 2	230 VAC
FP075	75W	6A/12VDC or 3A/24VDC
FP0150	150W	12A/12VDC or 6A/24VDC
FP0250	250W	20A/12VDC or 10A/24VDC
-iiEDOI	IFO	

age FPO150/250

ternational Series 85-265 VAC

FPG50 50W 2A/12VDC or 2A/24VDC FPG100 100W 8A/12VDC or 4A/24VDC FPG200 200W 8A/24VDC

### **ACCESSORY OPTIONS**

B100	Secondary voltage, 5-18VDC @ 4A
C4	Lock control distribution, 4 out
C8	Lock control distribution, 8 out
D8	Auxiliary distribution, 8 out
F8	FAI distribution, 8 out
M8	Managed lock control, 8 out (requires NL)
NL4	Four port network module
NLX	Eight port network module w/ RS485
SD4	Managed auxilliary, 4 out (requires NL)
SD16	Managed auxilliary, 16 out (requires NL)

### **ENCLOSURE**

<b>E</b> 5	8.5H" x 11W" x 3D"
E1	14H" x 12W" x 4.5D"
E2	20H" x 16W" x 4.5D"
E4	24H" × 20W" × 6.5D"
E6	30H" × 23W" × 6.5D"
E8	36H" x 30W" x 6.5D"
E12	48H" x 36W" x 8.0D"

### **BACKPLATE**

В	SF	SIEMENS
	٧	HID AERO
	X	
M	Z	ZKTECO

#### **PW SUFFIX** DESCRIBES



\*refer to product datasheet for detailed panel options

For class II power limited add "P" to pn: C4P, C8P, D8P, F8P, M8P, SD4P Note: SD16 is class II power limited and does not require a "P" in pr Add number for multiple modules in system 3D8 2M8P 2B100

### FPO150 / 250 - 3D8P 2M8 NL4 E8 M2 / P16-A



### PART NUMBER KEY

Desired FPO power supply is inserted into the model number as "FPOxxx"

Multiple supplies are entered with a slash between variants i.e. FPO75/150

Multiples of the same accessory module are preceded by the quantity: D8 = one D8 module for 8 outputs 2D8 = two D8 modules for 16 outputs

### **EXAMPLE**

### FPO150/250-3D8P 2M8 NL4 E8M2/P16-A

FPO150 - first power supply (typically 12V) FPO250 - second power supply (typically 24V) 3 (three) D8P modules for 24 auxiliary outputs 2 (two) M8 modules for 16 managed outputs NL4 Network module

E8M2 - E8 (36 x 30 enclosure) with Mercury backplate

\*ProWire Style:

P - Panduit

16 - door count

A - wired for Mercury 1502/MR52



FLEXPOWER's unique mix and match modularity creates many listed combinations - contact us with your requirements

UL294 / UL603 / ULC S318 / ULC S319 Regulatory

IEC 62368-1:2014 / EN 55032:2015 / EN6100-3-2:2014 Compliance

CE / NOM / BIS / RCM-SAA