

Overview

SCLASS™ Unified Power Systems are engineered to house FlexPower® power modules alongside the SWH iSTAR™ access hardware in one compact listed enclosure.

This unit is a 150W 12VDC power system for iSTAR™ Pro or Ultra controllers.

Two D8 modules provide sixteen auxiliary outputs and each output is configurable for either continuous or resettable DC when the fire alarm disconnect is initiated.

SCLASS enclosures are painted steel with removable backplate and include lock, two (2) keys and tamper switch.

System Features

- ◆ **FPO offline power supply**
 - 120 or 230 VAC input
 - 12 (24V) VDC output
 - On board Fire Alarm Interface
 - Continuous and resettable DC
- ◆ **Power Distribution**
 - Sixteen fused at 3A each
- ◆ **Expansion options**
 - Increased power, multiple voltages
 - Additional distribution outputs
 - Network monitoring and reporting
- ◆ **Lifetime Warranty**

Enclosure Features

- ◆ **Labor saving design**
 - Pre-wired power section
 - Pre-punched knockouts
 - Removeable backplate simplifies installs
 - Pre-defined hole pattern for power section
 - Access panels mount on threaded standoffs - no drilling required
- ◆ **Additional benefits**
 - Wire management room
 - 6.5" enclosure depth fits battery set
 - Tamper switch, lock, dual key set standard
 - Mounting hardware for access boards included




Ordering	Description
FP0150-2D8E8S	150W (12V/24V) 16 Auxiliary Outputs, SCLASS system

Specifications

Input Power	Input 120/230 VAC 50/60 Hz 170 Watts Overload and short circuit protection Over temperature protection Polarized AC power supply disconnect
Output Power	FPO150: 12V/12A (24V/6A) 150 Watts Outputs: Continuous (DC1) Resettable (DC2) 16 auxiliary outputs, fused at 3A each 120 mV output voltage ripple System Efficiency: 87% System BTU Rating: 66 BTU/Hr
Battery Charging	Independent built-in 2A charger for sealed lead acid or gel type batteries Microprocessor dual rate charging of 12V battery sets Charges up to 80Ah battery sets within UL limit Automatic switchover to standby battery when AC fails Zero voltage drop when switched over to battery backup
Supervision	AC Fail (form "C" contacts) System Fault (form "C" contacts) may be triggered by low/no battery, short to earth ground, power supply failure or blown fuse
Visual Indicators	AC input, DC1 and DC2 output System fault AC fault Short to earth ground Reverse battery polarity Fire Alarm Input activated D8: DC outputs
Regulatory Compliance LSP/SWH Joint Listing	UL294, UL603, UL1076 ULC S318, ULC S319, CSA C22.2 #107.1, CSA C22.2 #60950 CE FCC Part 15, Subpart B CSFM Approved
Physical Dimensions	Enclosure: 36.00H x 30.00W x 6.50D in. (91.00 x 76.00 x 16.50 cm)
Access Mounting	SWH ULTRA or ULTRA SE Controllers



SCLASS backplate board mounting pattern

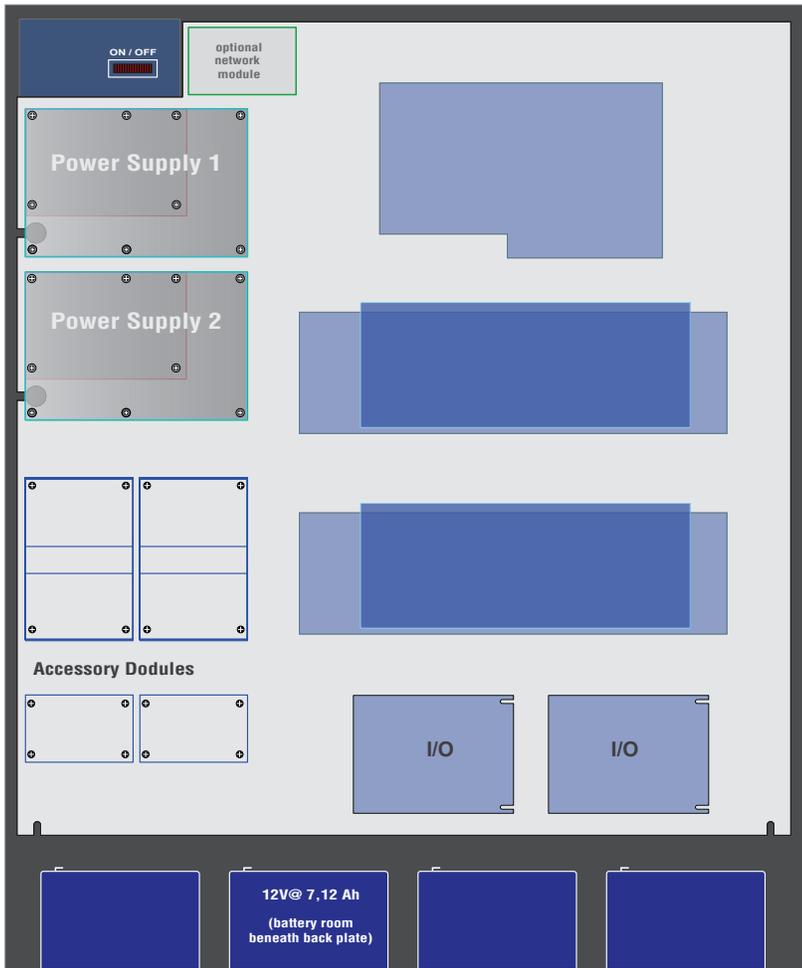

SWH Model No.	Available Slots
GCM ULTRA SE	1
GCM Ultra	1
ACM ULTRA SE	2
ACM Ultra	2
I/O	2

-  one (1) GCM
-  two (2) ACM - Ultra, Ultra SE
-  two (2) Input or Output

LifeSafetyPower.com

(888) 577-2898
 info@lifesafetypower.com

Specifications subject to change without notice.

© 2022 LifeSafety Power. All rights reserved. LifeSafety Power and FlexPower are registered trademarks of LifeSafety Power. All other trademarks and copyrights are the property of their respective owners.
 P01-683A 07/22

LifeSafety Power
 10027 S. 51st Street, Suite 102
 Phoenix, AZ 85044 USA